

Regulatory Information

This device is approved under Zebra Technologies Corporation.

This guide applies to the following model number: S-MTRX

All Zebra devices are designed to be compliant with the rules and regulations in the locations they are sold and will be labeled as required.

Local language translation / (BG) Превод на местен език / (CZ) Překlad do místního jazyka / (DE) Übersetzung in die Landessprache / (EL) Μετάφραση τοπικής γλώσσας / (ES) Traducción de idiomas locales / (ET) Kohaliku keele tõlge / (FI) Paikallinen käännös / (FR) Traduction en langue locale / (HR) Prijevod na lokalni jezik / (HU) Helyi nyelvű fordítás / (IT) Traduzione in lingua locale / (JA) 現地語翻訳 / (LT) Vietinės kalbos vertimas / (LV) Tulkojums vietējā valodā / (NL) Vertaling in lokale taal / (PL) Tłumaczenie na język lokalny / (PT) Tradução do idioma local / (RO) Traducere în limba locală / (SK) Preklad do miestneho jazyka / (SL) Prevajanje v lokalni jezik / (SR) Превод на локални језик / (SV) Översättning av lokalt språk / (TR) Yerel dil çevirisi / zebra.com/mv-support.

Any changes or modifications to Zebra equipment not expressly approved by Zebra could void the user's authority to operate the equipment.

Declared maximum operating temperature: 35°C



CAUTION: This is a Class A product. This equipment is not intended for use in residential environments and may not provide adequate protection to radio reception in such environments.


Regulatory Markings

Regulatory markings subject to certification are applied to the device. Refer to the Declaration of Conformity (DoC) for details of other country markings. The DOC is available at: zebra.com/doc.

Safety Precautions

Zebra Supersight safety precautions and key to symbols

Before installing, connecting to, and using Zebra Supersight, you shall be aware of the meaning of the symbols on the unit and important safety precautions. The following is a list of precautionary symbols on the unit and their meaning:

Symbol ^a	Description
	<ul style="list-style-type: none">• Caution: Consult this product's installation and hardware reference manual^b before installing, connecting to, and using Zebra Supersight. For hardware installation instructions, refer to <i>Chapter 2: Getting started with your Zebra Supersight</i> and <i>Chapter 3: Cleaning the air filter and connecting devices to the backplane and SHB board</i>; for environmental and electrical specifications and connector pinout descriptions, refer to <i>Appendix B: Technical reference</i>. <p>This product must be used as specified; otherwise, the protection provided by its components might be compromised. Any usage, changes, or modifications to Zebra equipment not expressly approved by Zebra could compromise product safety and void the user's authority to operate the equipment.</p> <ul style="list-style-type: none">• Refer to the <i>Electrical specifications</i> section, in <i>Appendix B: Technical reference</i> of the above-mentioned manual, for voltages and current ratings.• To service the equipment, always turn-off the unit and disconnect the main AC power before opening the unit. Always secure the equipment and close the chassis before reconnecting the main AC power.• This product is a Class I equipment as per industry standards.• This product is designed for use in a pollution degree 2 environment as per industry standards^c.• This product is designed for indoor use only.• This product is designed to operate at temperatures ranging from 0°C to 35°C at a non-condensing relative humidity of 10 to 90%.• This product is not intended for use at altitudes exceeding 2000 m.

a. Note that these symbols might not necessarily be the same color as depicted.

b. Manual available on the Zebra website at zebra.com/mv-manuals.

c. As per CAN/CSA-C22.2 No. 62368-1-14, ANSI/UL 62368-1-2014, EN 62368-1:2014 + A11:2017, IEC 62368-1:2014 (ed. 2.0).

Ergonomic Recommendations

In order to avoid or minimize the potential risk of ergonomic injury, always follow good ergonomic workplace practices. Consult with your local Health and Safety Manager to ensure that you are adhering to your company's safety programs to prevent employee injury.

Connecting to a LAN Network

Please note that this device is not tested or authorized to be connected via Ethernet cable to a Local Area Network (LAN) in outdoors conditions. It may only be connected to an indoor LAN.

CE Marking and European Economic Area (EEA)

Statement of Compliance

Zebra hereby declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU and 2011/65/EU.

The full text of the EU Declaration of Conformity is available at: zebra.com/doc.

EU Importer : Zebra Technologies B.V
Address: Mercurius 12, 8448 GX Heerenveen, Netherlands

Waste Electrical and Electronic Equipment (WEEE)

For EU and UK Customers: For products at the end of their life, please refer to recycling/disposal advice at: zebra.com/weee.

United States and Canada Regulatory

Radio Frequency Interference Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.



NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Radio Frequency Interference Requirements – Canada

Innovation, Science and Economic Development Canada ICES-003 Compliance Label: CAN ICES-003 (A)/NMB-003(A)

日本 (Japan)

Class A ITE

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。
VCCI-A

Brasil

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Türkiye

TÜRK WEEE Uyumluluk Beyanı

EEE Yönetmeliğine Uygundur.



United Kingdom

Statement of Compliance

Zebra hereby declares that this device is in compliance with Electromagnetic Compatibility Regulations 2016, the Electrical Equipment (Safety) Regulations 2016 and the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

The full text of the UK Declaration of Conformity is available at: zebra.com/doc.

UK Importer: Zebra Technologies Europe Limited

Address:

Dukes Meadow, Millboard Rd, Bourne End, Buckinghamshire, SL8 5XF

Warranty

For the complete Zebra hardware product warranty statement, go to: zebra.com/mv-support.

Service Information

Before you use the unit, it must be configured to operate in your facility's network and run your applications.

If you have a problem running your unit or using your equipment, contact your facility's Technical or System Support. If there is a problem with the equipment, they will contact Zebra support at zebra.com/mv-support.

For the latest version of the guide, go to: zebra.com/mv-manuals.

Patent Information

This product may be protected by one or more patents.

Patents: zebra.com/patents.