


ET5X 4-SLOT CHARGE ONLY CRADLE INSTALLATION GUIDE




Parts

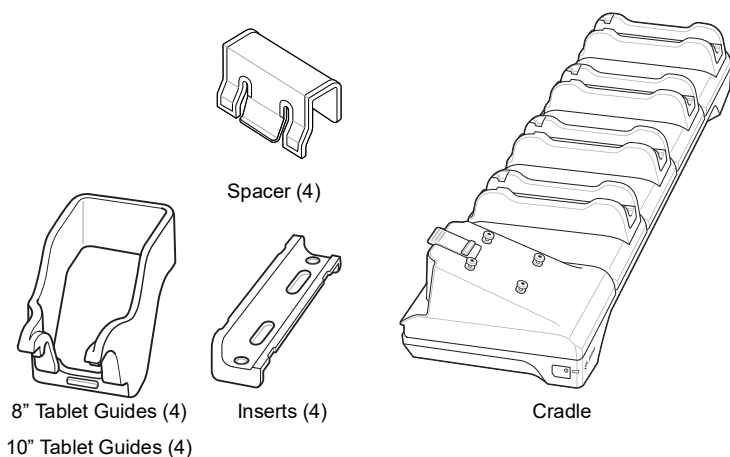


Insert Installation

Install inserts into slots for ET5X tablets without Rugged Frame.

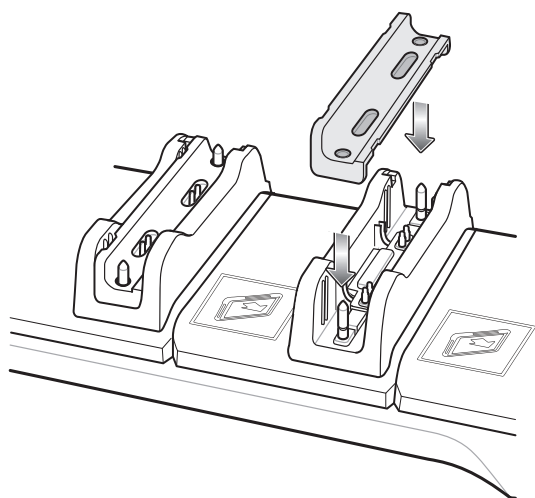

Spacer Installation


Install spacers onto slots for ET51 with Integrated Scanner.

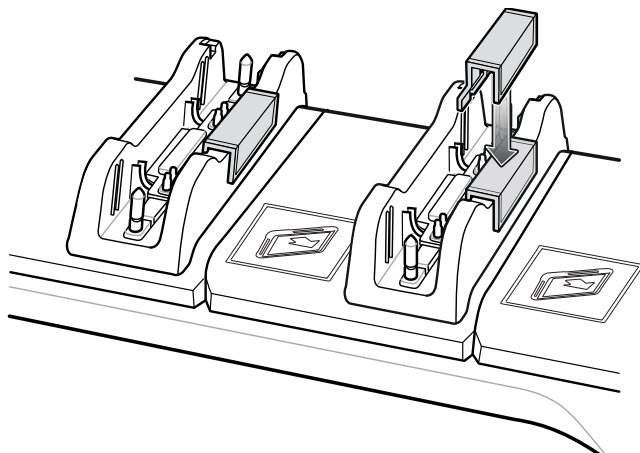


Guide Installation

The cradle comes with four 8" tablets guide and four 10" tablet guides. Install the appropriate guides for the tablets.

1. Align the two tabs on the guide with the two slots in the cradle.

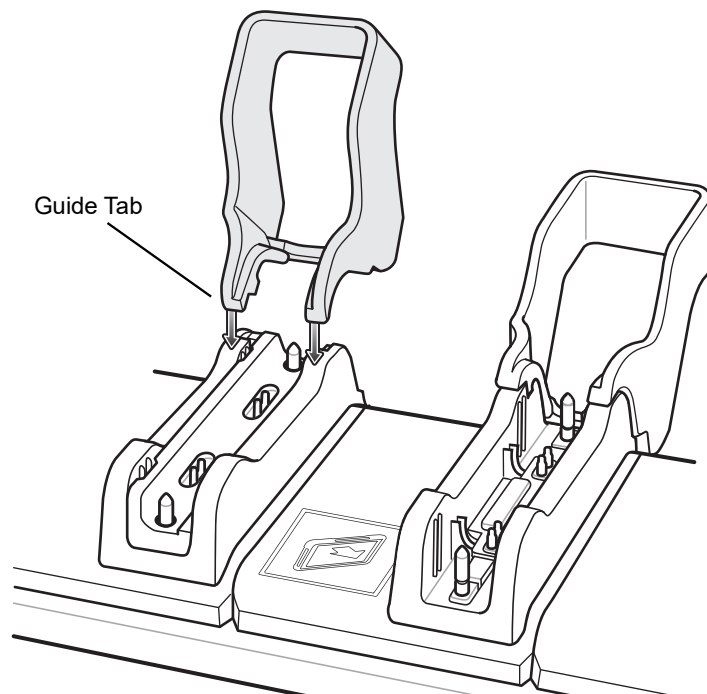


2. Place the guide down onto the cradle and then rotate the guide until it snaps into the cradle.

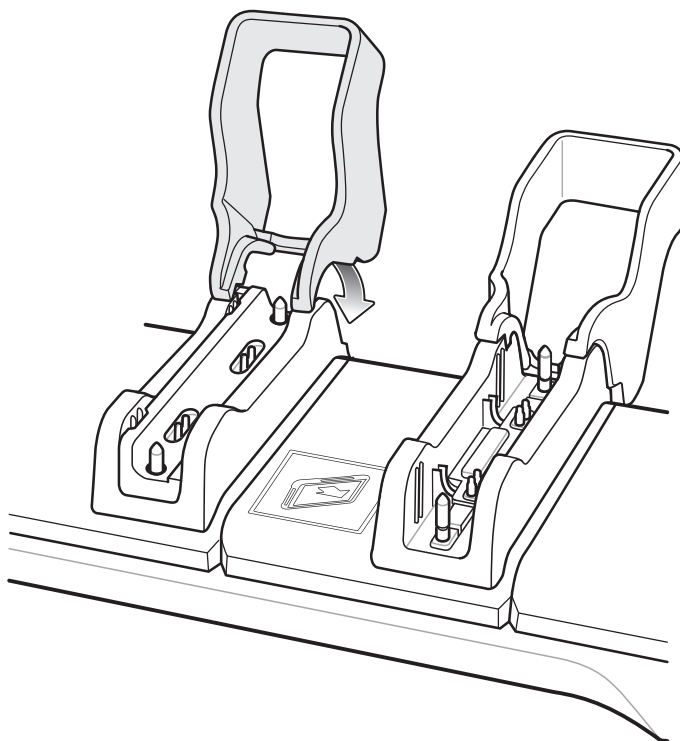

Battery Charger Installation

Install optional 4-Slot Battery Charger onto cradle:


1. Align the mounting holes on the bottom of the charger with the four studs on the cradle.

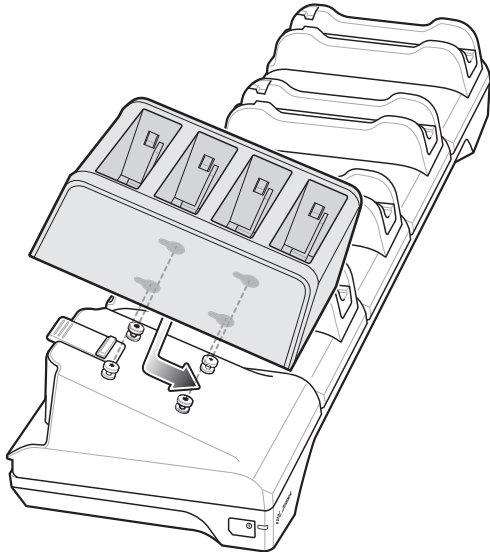

2. Place the charger on the cradle and then slide toward the front of the cradle.

Power Setup


Shown with options charger.

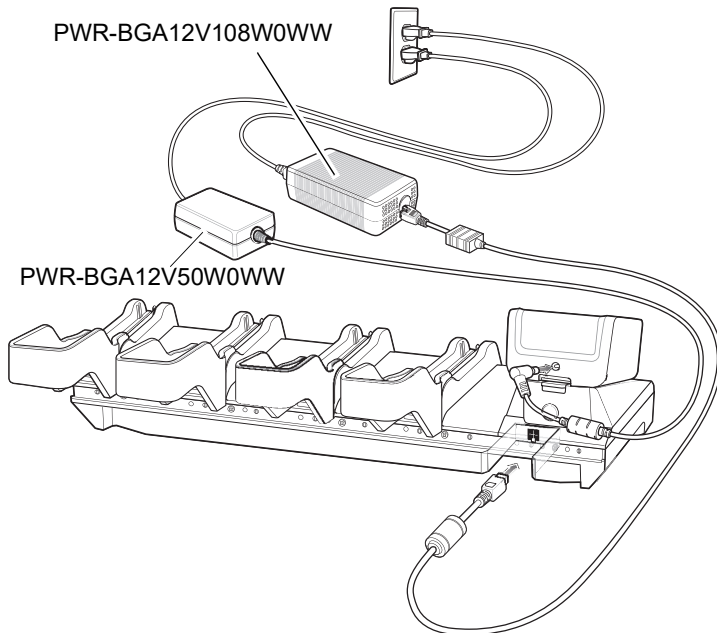

Insert Tablet into Slot

ET5X without Rugged Frame

1. Install insert into slot.
2. Align the two alignment holes on the bottom of the tablet with the two alignment pins in the slot.

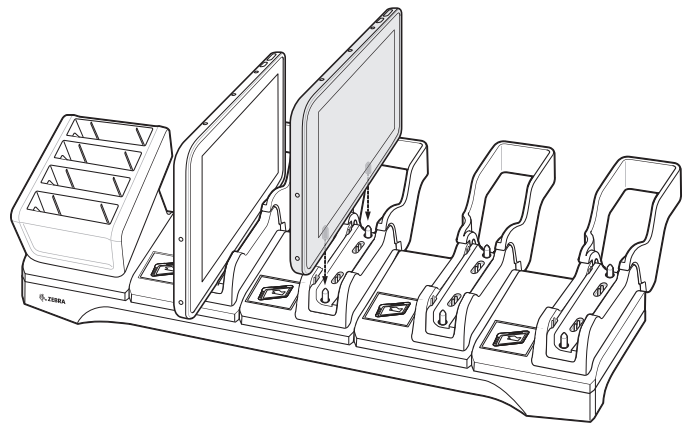


3. Place the ET5X down into the slot with display facing away from Battery Charger.



NOTE: Ribs on the slot and insert ensure that the tablet is inserted in the correct orientation.

ET5X with Rugged Frame


1. If applicable, remove insert from slot.
2. Slide ET5X over slot until it touches the guide.

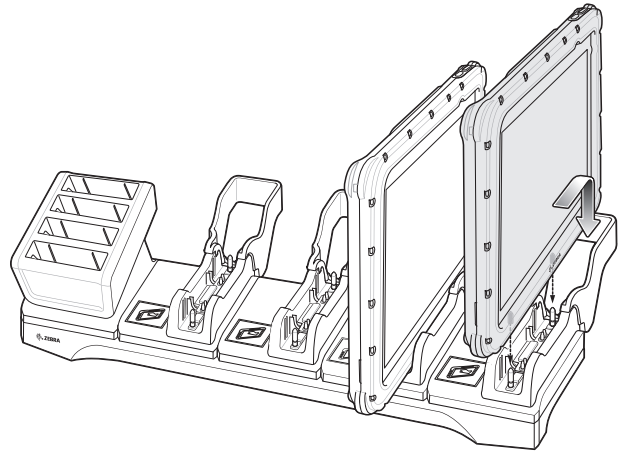

3. Place the ET5X down into the slot with display facing away from Battery Charger.

ET51 with Integrated Scanner

1. If applicable, remove insert from slot.
2. Insert spacer onto cup.
3. Slide ET51 with Integrated Scanner over slot until it touches the guide.

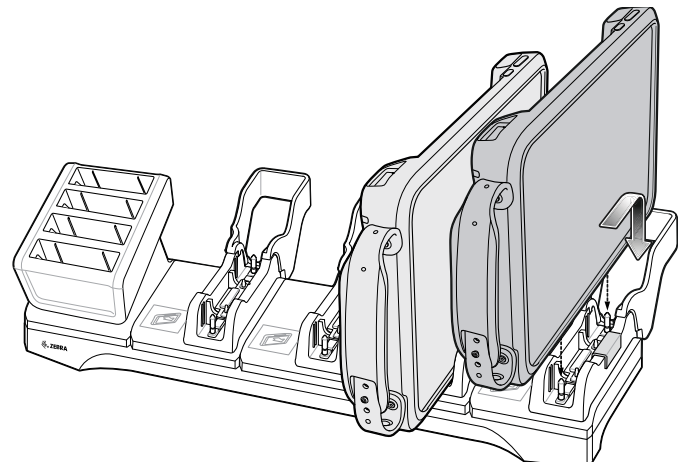

4. Place the ET51 with Integrated Scanner down into the slot with display facing away from Battery Charger.