


# TC7X Ethernet Cup Conversion Installation Instructions




**NOTE:** This rework activity must be performed by the qualified technician or engineer in an ESD safe workstation. The technician or engineer must wear a grounded ESD strap.


1. Remove the AC power from the cradle.
2. Remove the screw securing the Ethernet cup to the cradle using a Phillips screwdriver.

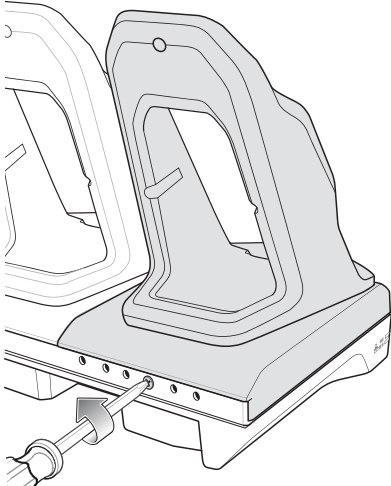


3. Slide the Ethernet cup forward and lift.

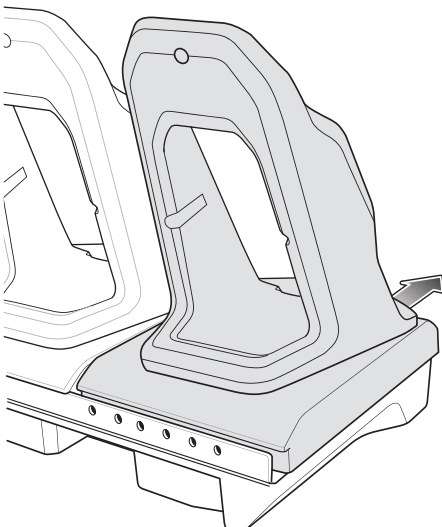


4. Disconnect the Ethernet cup cables (power and data) from the connectors.

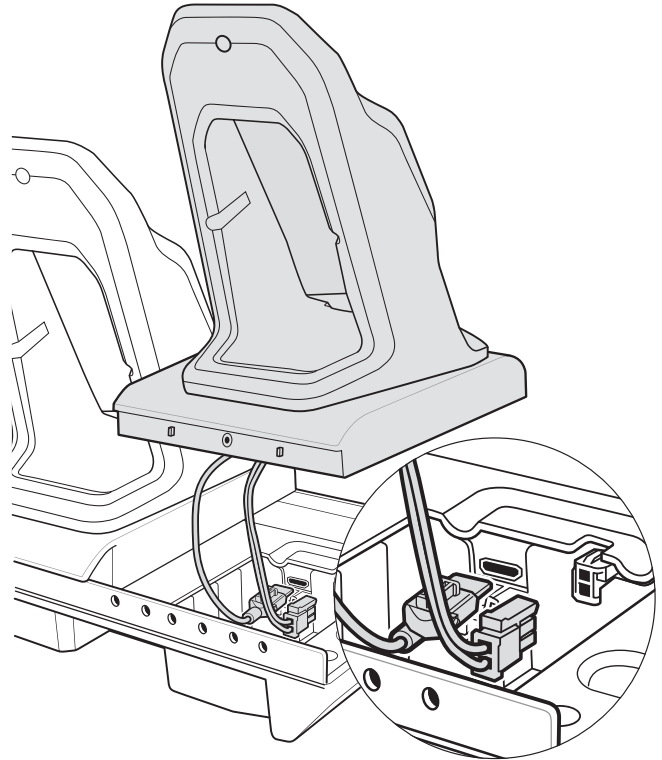


5. Connect the replacement TC5/TC7 cup cables (power and data) to the cradle connectors.

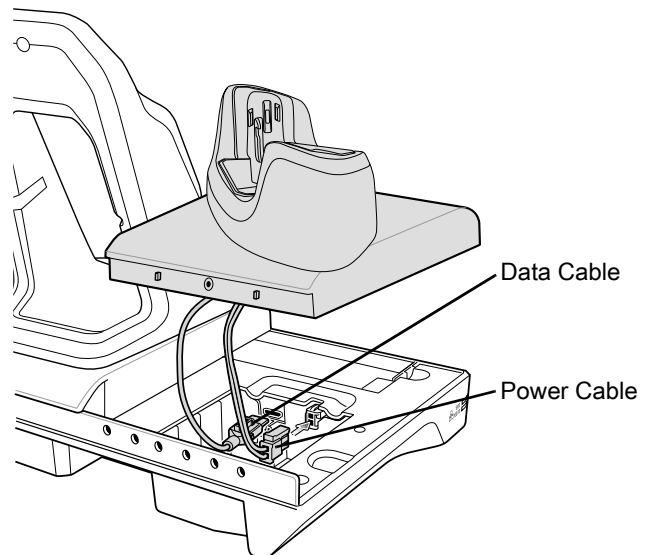

6. Place the data cable in the cable channel and under the cable retention tab on the cradle base.

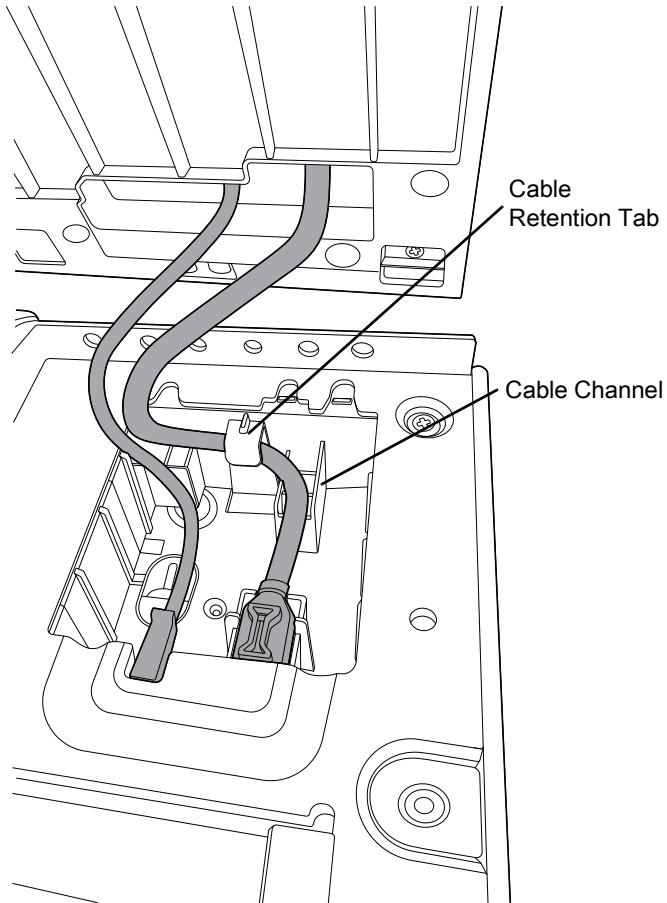

8. Using a Phillips screwdriver, secure the new cradle cup to cradle with screw.

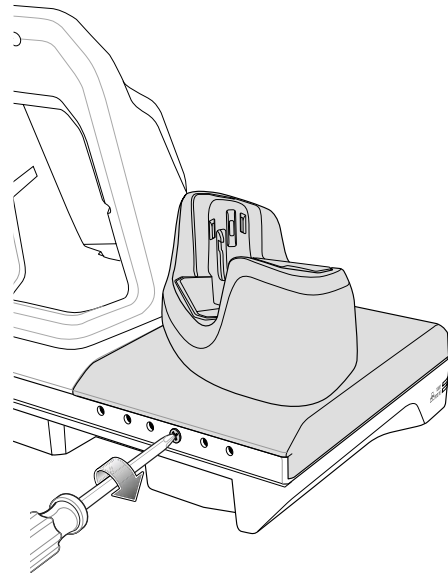

7. Align the new cradle cup with the cradle and slide the cradle cup back.

